

To reduce the risk of drowning, entrapment, falls, paralysis, electrocution, or other serious injury or death:

Dealer/Installer: Give manual to homeowner.

Installer: Read **"Safe Installation"** on p. 2 and all instructions before beginning. For proper assembly and installation, instructions must be followed completely.

Homeowner: Read "Safe Use" on back cover before using. Save these instructions.

Installation must comply with local codes and may require permits.

MODEL #8000X OUTSIDE SAFETY LADDER FOR USE ONLY WITH THE CONFER-STEP-1X.

Fits 48" to 54" pools

Do not use with inflatable pools.

WEIGHT LIMIT 300 LBS. ASSEMBLY, INSTALLATION AND USE MANUAL

Assembly video available online: www.conferplastics.com




Scan to see our Installation Videos





Model #8000X Outside Safety Ladder

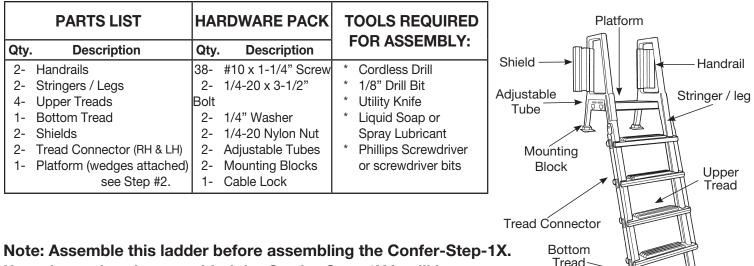

Note: Assemble this ladder before assembling the Confer-Step-1X. If you have already assembled the Confer-Step-1X it will be necessary to remove the handrails (see step #10).

Safe Installation



To reduce the risk of electrocution, drowning, entrapment, falls, or other serious injury or death:

Check building codes/permitting. Consult your local Building Department before installation of your pool and equipment. Pool/equipment installation must comply with the codes of the authority having jurisdiction and may require permits (e.g., building, plumbing, electrical, zoning, etc.).

Use for intended purpose only

- Use only as swimming pool ladder.
- This ladder is designed and manufactured for a specific pool wall height and/or deck of the pool check product specification and the height of your pool.

Check that you have all required parts. Check the contents of the carton with the Parts list for this step system. All parts and hardware are required. If any parts are missing, **DO NOT attempt to assemble or install the steps.** Instead, call Toll Free U.S. - 800-635-3213 or visit our web site at www.conferplastics. com for assistance.

Select an appropriate location - The step system must be located on a solid base.

Follow all instructions


- For stable, correct assembly and installation, all instructions must be followed completely and in the sequence shown.
- Follow the manufacturer's recommendations for the safe use of all hand tools and equipment used during installation.


Cordless drill only - no corded drills near pool. Use a cordless drill for assembly and installation. To reduce the risk of electrocution, NEVER use a corded drill in or around a pool.


Lift safely. When lifting awkward or heavy loads, have another person help you.


Double check after installation

- Before using the product, after assembly and installation, go over the instructions and procedures again to make sure nothing has been overlooked.
- Make sure that safety labels are installed and legible.

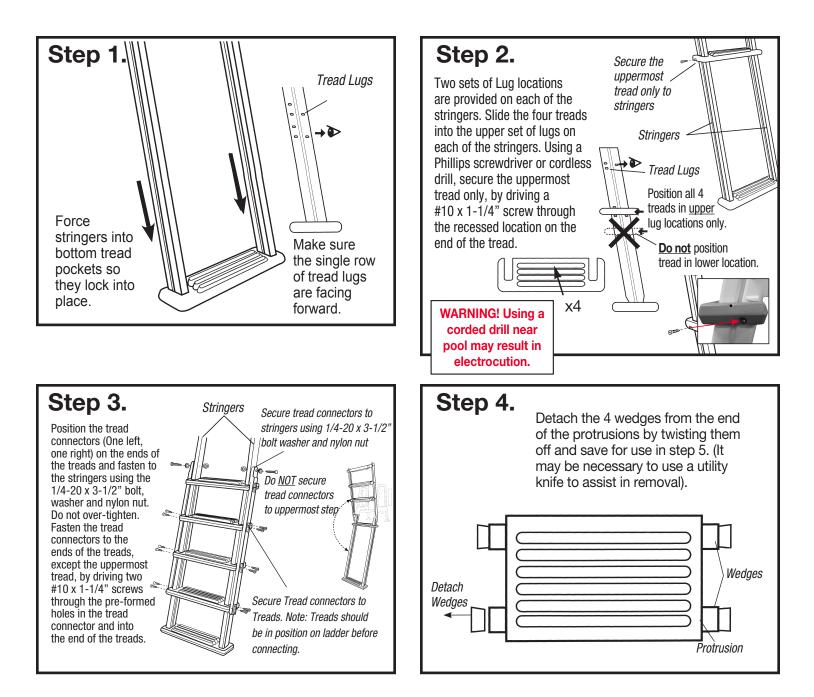

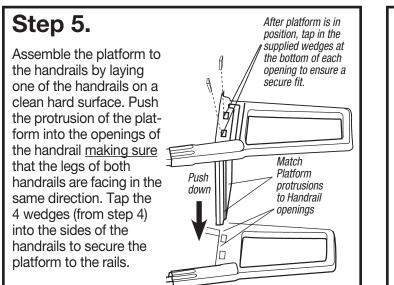

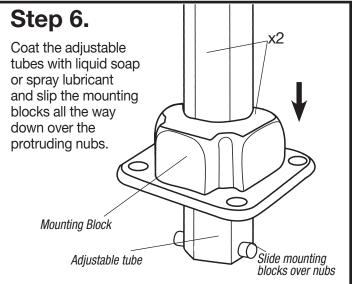


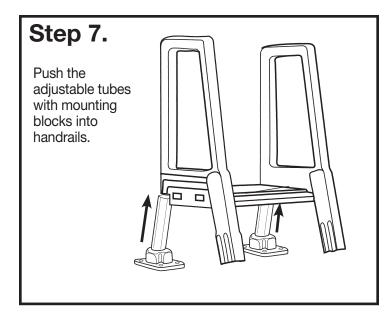


Step 8.

Attach the handrails to the ladder assembly, making certain that the treads face correctly.

Note: Coat the ends of the stringers with liquid soap or spray lubricant before sliding handrails into postion.

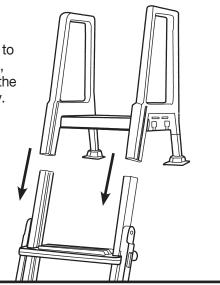

WARNING! Verify that your chosen location is level, has a solid base, and will be in full view of competent adult supervision when in use.

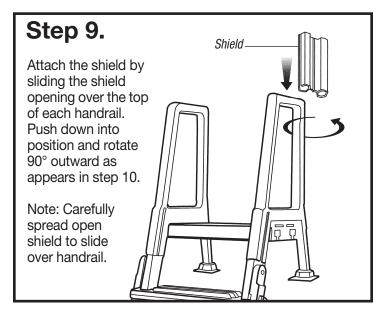

Remove the Step 10. Confer Step handrails so DO NOT PLACE THE STEP-1X shields can INTO THE POOL AT THIS TIME 'he slid over the handrail Slide the shields down over the posts. upper handrail posts on the Handrail posts Step-1X until the mounting blocks rest on the top step of the Step-1X as shown in the diagram. Using a cordless drill attach the mounting blocks to the top step using 4 - #10 x 1-1/4" screws in each mounting block. (8 total). Separate the 8000X from the Step-1X by lifting the ladder off of the adjustable tubes. Do not remove adjustable tubes and mounting blocks WARNING! Shields must be attached from the Step-1X. to reduce the risk of entrapment

Step 11.

At this time with **ADDITIONAL** help place the Step-1X into swimming pool, refer to separate Step-1X instructions.

With the Step-1X in position install the 8000X ladder by sliding the shields down over the step handrail posts and the ladder rails down over the adjustable tubes. Attach the ladder handrails to the outside ladder stringers using two #10 x 1-1/4" screws at the pre-marked locations on each handrail. (4 total) Level the ladder platform by moving up or down on the adjustable tubes. Once level secure the ladder handrails to the adjustable tubes using two #10 x 1-1/4" screws at the pre-marked locations on each ladder handrails to the adjustable tubes using two #10 x 1-1/4" screws at the pre-marked locations on each ladder handrail. (4 total). Fasten the shields to the 8000X handrails using four #10 x 1-1/4" screws per shield. (8 total) Install the Step-1X handrails, refer to separate Step-1X instructions.

WARNING! Using a corded drill near pool may result in electrocution.

Using a cordless drill, secure the 8000X mounting blocks to Confer Step top step before securing the 8000X handrail.



Safe Use

To reduce the risk of drowning, entrapment, falls, paralysis, or other serious injury or death:

Use ladder properly.

- No diving or jumping from ladder shallow water; risk of paralysis or death.
- FOR ENTRY/EXIT OF POOL, FACE THE LADDER AT ALL TIMES.
- ONE PERSON ON THE LADDER/STAIR AT A TIME.
- To reduce the risk of entrapment or drowning, DO NOT swim through, behind or around ladder.
- Illuminate the ladder when using the pool at night.

Weight limit - 300 lbs maximum. Exceeding maximum weight may cause the ladder to fail.

Secure ladder when not in use. When pool is NOT IN USE, keep outer treads in the up position and locked with the padlock. (See "Swing Up Instructions", below.) Watch children at all times when they are in or around water to help prevent drowning.

MAINTENANCE: Check the padlock for proper operation and lubricate if necessary.

WINTERIZING: Unfasten the ladder from adjustable tubes and pool step and remove. When winterizing your pool, if you decide to leave the pool step in the pool move the step towards the center of the pool and away from the pool wall. Remove any outside steps or ladders from the pool area to eliminate access to the pool. The Confer-Step-1X can be covered, if desired, and stored outdoors. If you decide to remove your pool step from the pool:

AWARNING Pool step will be heavy and must be lifted from within the pool. Have additional help if you move the step or choose to remove it from swimming pool. Do not attempt to do this by yourself - 2-3 people are required to move pool step safely. DO NOT lift pool step by handrails or handrail posts - they may detach, possibly resulting in a fall.

Remove any outside steps or ladders from the pool area to eliminate access to the pool.

From inside the pool position one person on each side of the step, grip the bottom of the side panels and carefully lift the step high enough to start tilting back. DO NOT LIFT STEP BY HANDRAILS, POSTS OR TOP TREAD. THE HANDRAILS, POSTS AND TOP TREAD WILL NOT SUPPORT THE WEIGHT OF THE POOL STEP AND MAY DETACH OR BREAK, RESULTING IN A FALL OR INJURY.

Rest the step on the pool top ledge until most of the water has drained. Once it is light enough, carefully lift over the side of the pool, laying unit on its back side. Allow most of the water to drain from the side panels. Once the water has drained, stand the step up. To reinstall, see Step #11.



MADE IN THE U.S.A. by:



97 Witmer Road North Tonawanda, New York 14120-2421 Toll Free U.S. 866-396-2968 716-283-1826/ FAX 716-283-3249 *www.conferplastics.com*